



Altec Lansing BoomJacket Speaker Replacement

This guide will give step by step information on how to replace the speaker in your Altec Lansing BoomJacket.

Written By: Ryan Byrnes



INTRODUCTION

Are your speakers not producing the same amount of BOOM that they used to? Perhaps repairing your speakers is the way to go.



TOOLS:

- [Metal Spudger](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Rubber casing](#) (1)
- [Screws](#) (16)
- [Metal Backing](#) (1)
- [Metal Fronting](#) (1)
- [Speaker](#) (1)
- [Plugs](#) (6)

Step 1 — Speaker



- Using your hands, remove the pegs (4+4) from the front and back of the speaker.

Step 2



- Remove the outer black rubber housing of the speaker.

Step 3




- Remove the inner blue rubber housing from the speaker.

Step 4



- Pull out the two black wire meshes using a metal spudger.
- ⚠ Be careful not to damage the metal casing.

Step 5

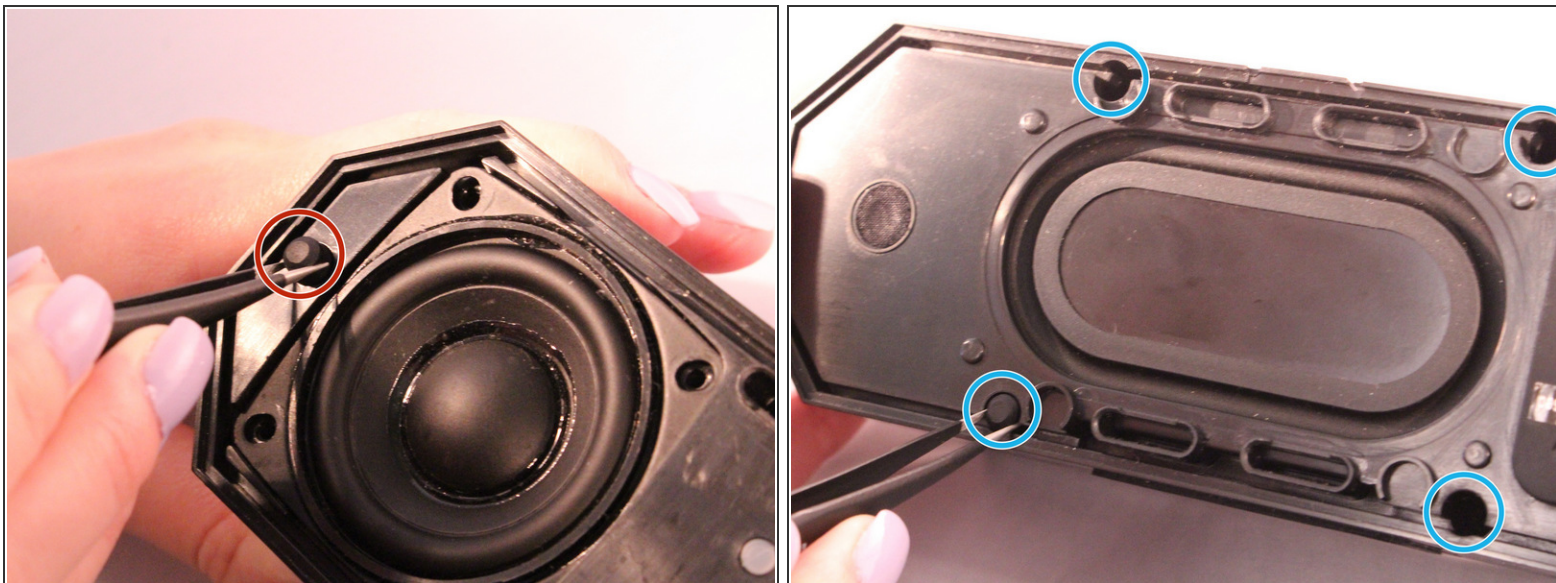


- Using tweezers remove the rubber stoppers (4 at the back + 2 at the front).

Step 6



- Using the size PH1 screwdriver remove the screws (4 around each speaker).

Step 7

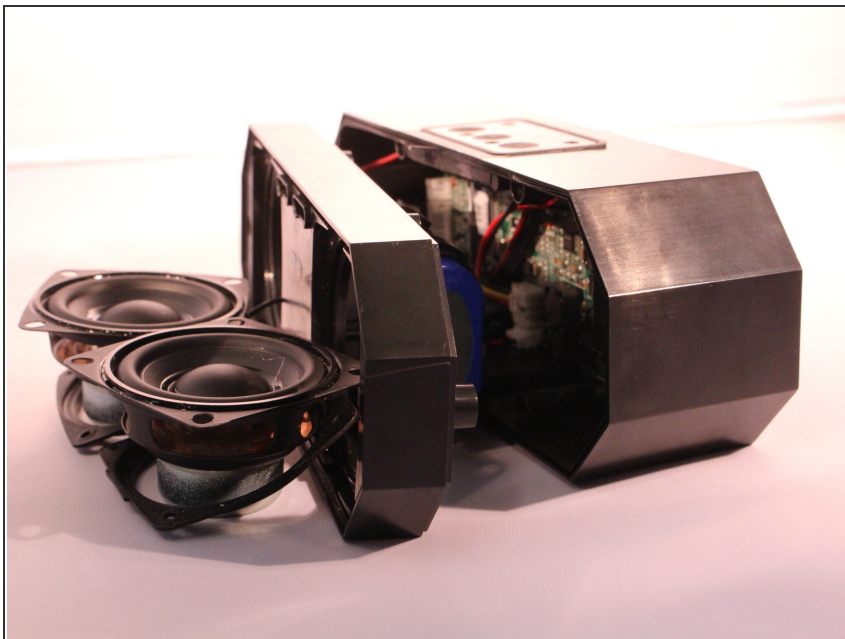

- Pull the case apart and you will be able to see all the components inside the speaker.

Step 8



- Remove the speakers (not entirely because of the wiring) by gently pulling each speaker up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 04:10:12 PM.